

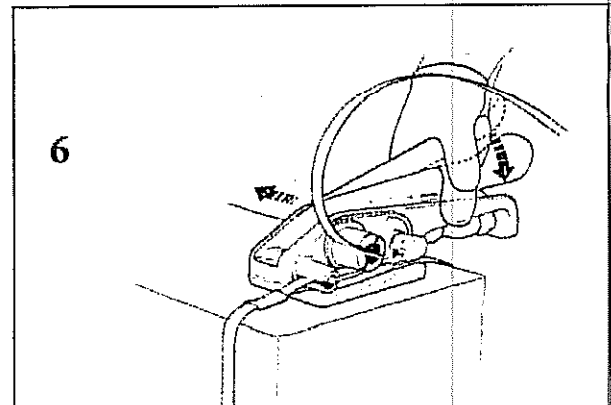
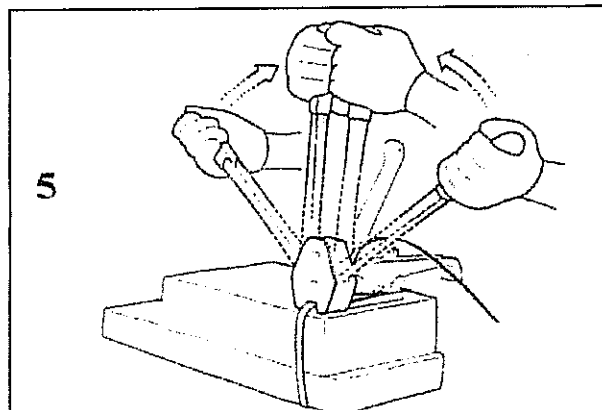
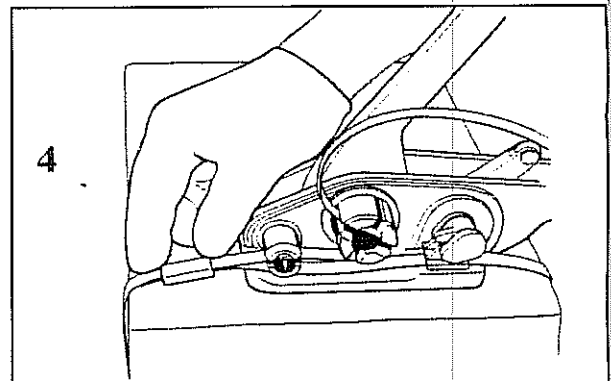
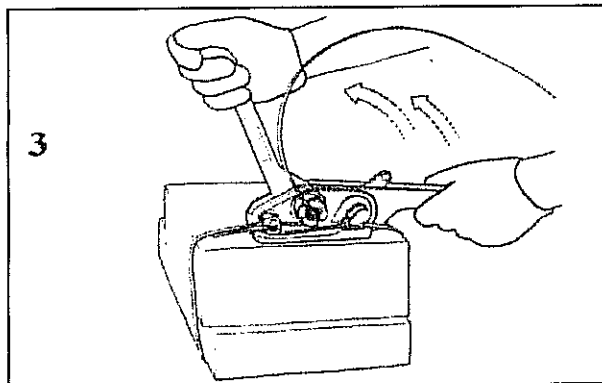


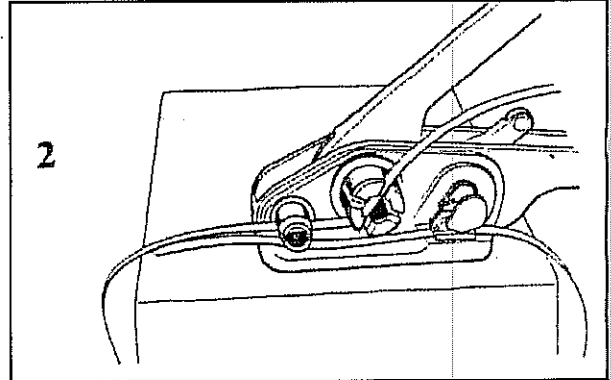


B+W ART.NR. 19176/17148/17149

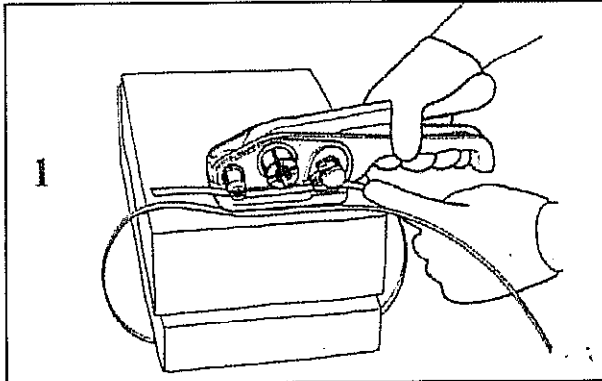

WINDLASS TENSIONER


YYP117-C

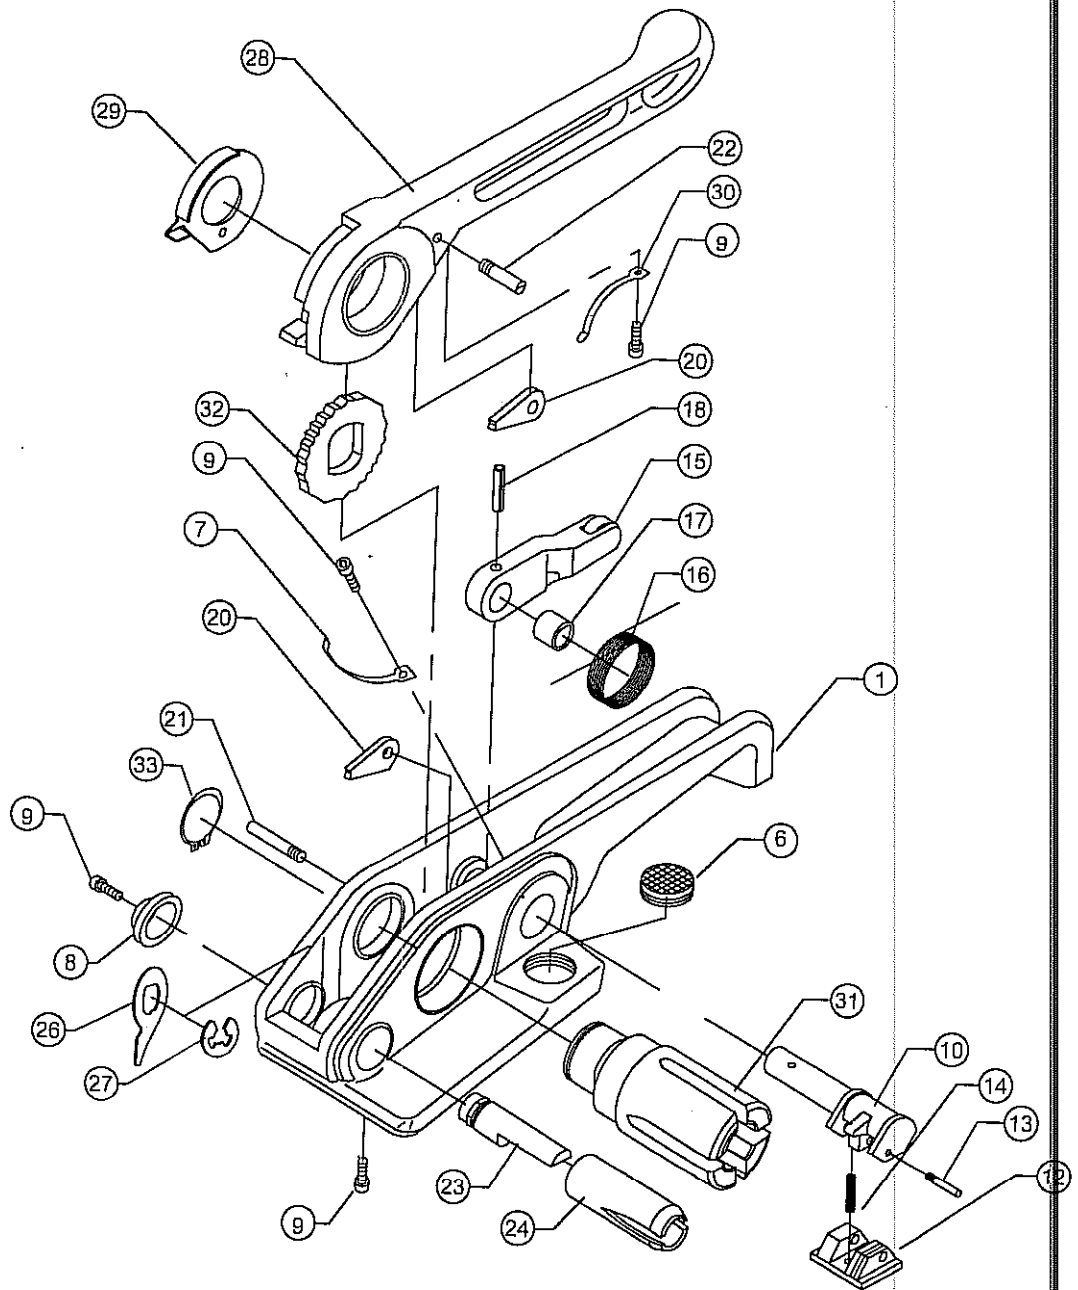


Part No.	Part Name	Qty/Tool	Part No.	Part Name	Qty/Tool
1	Base	1	20	Toggle	2
6	Base Plug	1	21	Base Shaft	1
7	Base Toggle Spring	1	22	Handle Shaft	1
8	Washer	1	{ 23	Cutter Blade	1
9	Screw	4		Cutter Housing	
10	Leg	1	26	Cutter Cam	1
12	Gripper	1	27	E Ring	1
13	Foot Screw	1	28	Handle	1
14	Foot Spring	1	29	Nose Hook	1
15	Lever Release Assembly	1	30	Handle Spring	1
16	Main Spring	1	31	Windlass	1
17	Main Spring Bushing	1	32	Ratchet Wheel	1
18	Spring Pin	1	33	Clip Ring	1

Keep tool well oiled and clean. Please order parts by number and name.


SAFETY INSTRUCTIONS

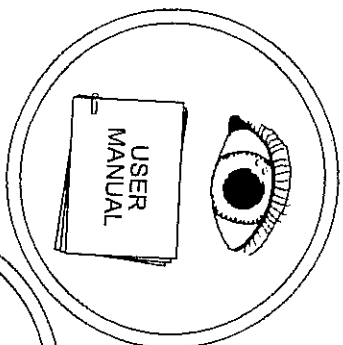


1. THIS TOOL (OR CUTTER) WAS DESIGNED AND MANUFACTURED FOR SAFE HANDLING DURING THE OPERATION, FOR EFFECTIVE SERVICE, PLEASE READ AND FOLLOW ALL SAFETY, MAINTENANCE AND OPERATING INSTRUCTIONS.

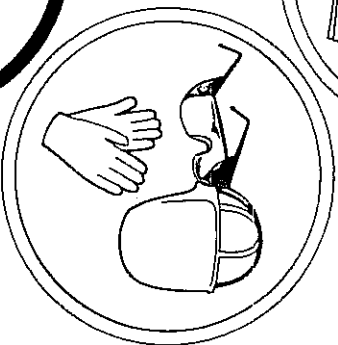

2. ALWAYS WEAR EYE, FACE, AND HAND PROTECTION WHEN OPERATING THIS TOOL.

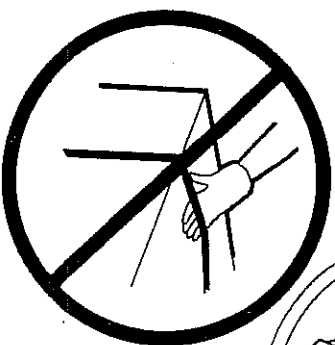


3. DO NOT PUT HANDS OR OTHER PARTS OF THE BODY BETWEEN THE STRAP AND THE PACKAGE.

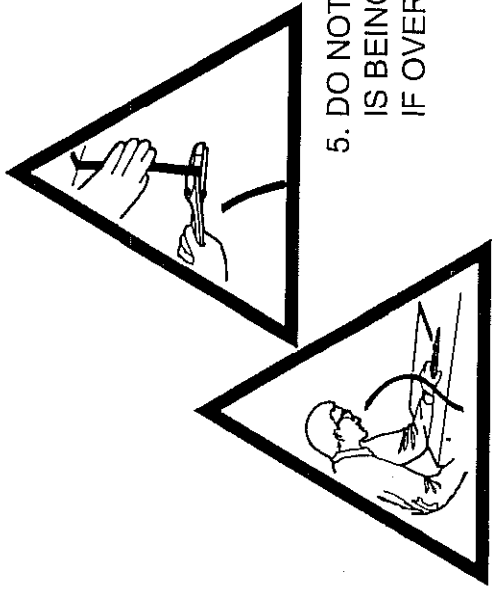

4. WHEN CUTTING THE STRAP, HOLD THE UPPER PORTION AND STAND AT A SAFE DISTANCE AWAY FROM THE STRAP, AS THE LOWER STRAP WILL SNAP FORWARD.

5. DO NOT STAND IN LINE WITH THE STRAP WHILE IT IS BEING TENSIONED, THE STRAP COULD BREAK IF OVER TENSIONED.

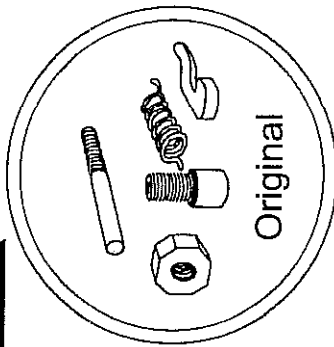

6. USE THE ORIGINAL REPLACEMENT PARTS.

MAINTENANCE INSTRUCTIONS

●●● CLEAN THIS TOOL WITH BRUSH OR PERIODICALLY BLOWING DUST OR DIRT OFF, WITH CLEAN, DRY COMPRESSED AIR.

●●● APPLY LIGHT MACHINE OIL TO ALL MOVING PARTS.