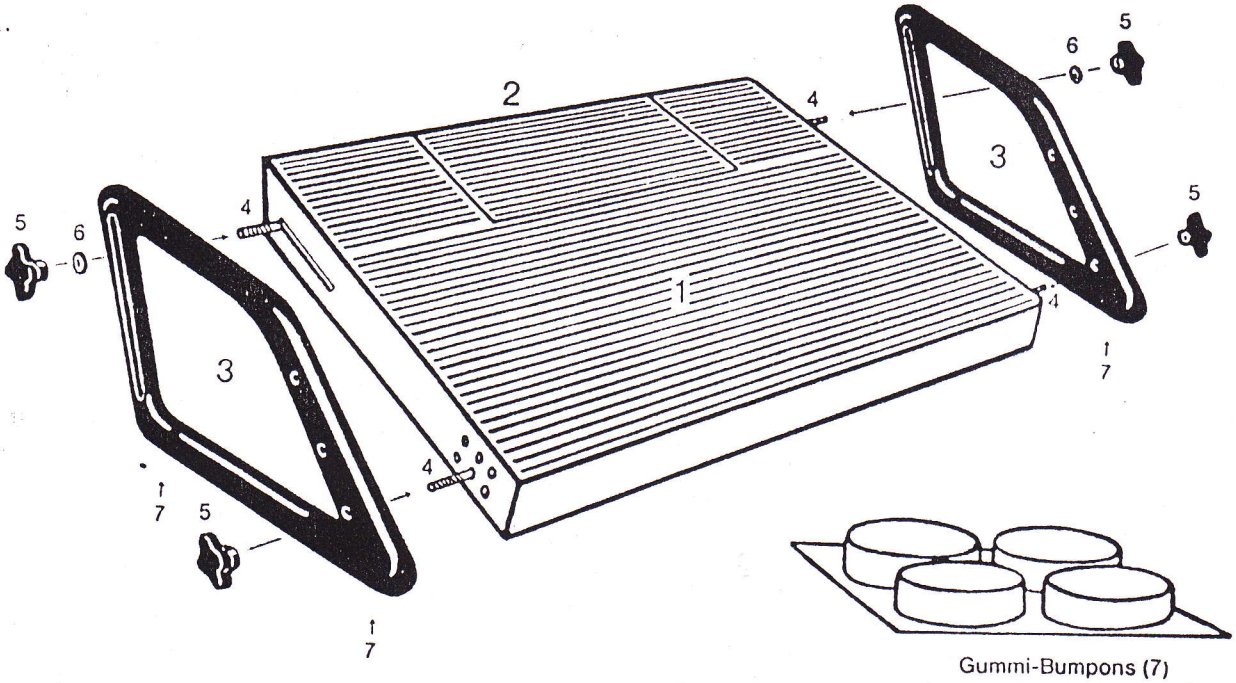

Gebrauchsanweisung Relax 275.1

Kleben Sie die beigefügten **Gummi-Füße (7)** auf die Unterseite der beiden **Seitenteile (3)**, und beachten Sie die dafür vorgesehenen Aussparungen!

Die Montage erfolgt lt. beigefügter Skizze. Verwenden Sie hierzu die beigefügten **Gewindestäbe (4), Rändelschrauben (5)** und **Unterlegeschrauben (6)**.
Hierbei können Sie die Höhe je nach Bedarf frei wählen.

Fußstütze auf eine ebene Unterlage stellen, gewünschte Höhe einstellen, Rändelschrauben vorne und hinten festziehen - fertig!

Sollten Sie einen Fußschalter verwenden, nutzen Sie die **Aussparung (2)**.
Der Einsatz läßt sich leicht abheben.

Assembly of WEDO RELAX footrest 275.1

Stick the attached **rubber feet (7)** in the small holes at the bottom of the **side-frames (3)**. Please assemble the footrest on a flat surface as per attached drawing. Use the attached **thread-rods (4), knobs (5)** and **washers (6)**.

To select the most suitable front adjustment feed the **thread-rod (4)** into the corresponding holes in **platform (1)** and **side-frames (3)**. Tighten lightly both knobs.

To select the rear adjustment feed the **thread-rod (4)** into the slots of the **side-frames (3)** and the **platform (1).** Move the **platform (1)** to the position required within the **side-frames (3)** and tighten both **knobs (5)**. Now tighten both **front knobs (5)**.

The **RELAX** incorporates a removable **cover (2)** revealing a compartment to take foot controls for copyholders, dictating machines, etc.